

### Built-in Kitchen Appliances

### **User manual for Free Standing Wine chiller**



CW-24,

CW-38,

**CW-120** 

# **Contents**

1-	Structure4
2-	Important safety instruction5
3-	Wine cabinet installation5
4-	Temperature setting6
5-	Loading and storage of wine bottle8
6-	Installation of Handle9
7-	Wood Shelf Changing9
8-	Maintenance 10
9-	Trouble Shooting11

### **EXPLANATION**

This Instruction Manual is the universal-purpose version for the models of wine cabinet manufactured by our Co. The appearance of the units that you purchase might be slightly different from the Manual, but it does not affect your proper operations and usage. Please read carefully the sections corresponding to the specific model you choose, and keep the manual properly so as to facilitate your reference at later time.

# matters need attention

### Waste disposal tips

Wrappage is used to protect electric appliance during transport and every part of materials are recycled materials.

- Corrugated paperboard/paperboard (made from waste paper)
- Polystyrene block (foam fluoride-free polystyrene)
- Plastic film, bag (polystyrene)
- Packing string (polystyrene)
- Never let child play with packing materials, plastic film may cause suffocation.
- Transport packing materials to public environmental collection depot.
   Waste cold wine cabinet still has many valuable raw materials and shall be treated separately in residential area not adopting garbage classification.
- Waste cold wine cabinet shall be scraped timely; take off plug,and remove power soft cable. Destroy lock to prevent such situation that a kid is locked by him/herself when playing the lock.
- Before sending the waste cold wine cabinet to public collection depot, cold circulation system shall not be damaged to ensure that the refrigerant and oil of cold wine cabinet suffers no leakage.
- For situations on waste collection date and collection depot, please consult with local environmental sanitation department or government agency.

# Warning




 Refrigerant and foam layer is flammable, Pay attention to the fire when maintenance, installation, transportation and handling. Used product need to be recycled by specialized companies, do not arbitrarily discarded.

- It is prohibited to place the machine in a place where is possible to leak corrosive and flammable gas, it is easy to explode or damage the machine.
- The grounding wires cannot be connected with the gas pipe, the water pipe system, the lightning rod and the telephone. If ignore this, it will has the possibility to cause the receiving an electric shock accident.
- Cannot lengthen the power cord without authorization, meanwhile, this appliance couldn't share a socket with other appliance, otherwise, it is easy to cause short circuit or damage the electronic components.
- •This product does not contain any spare parts, please do not disassemble. The refrigerant used in this product is combustible, non-professional maintenance personnel shall not repair the machine, improper repair may be the risk of fire or explosion. If the machine is faulty, please contact the service personnel.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged
- WARNING: Do not locate multiple portable socket-outlets or portable power supplies at therear of the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The plug must can be accessible after the product installed.
- DANGER: Risk of child entrapment. Before you throw away your old: refrigerator or freezer:
- \* Take off the doors.
- \* Leave the shelves in place so that children may not easily climb inside.

  This appliance is intended to be used in household and similar applications such as
- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.
- When the machine is installed, the left and right sides and back must have more than 5cm of the heat dissipation space, (Freestanding only) the machine can not store. flammable items.
- During handling, be careful, do not carry from the front and rear of the box, should be tilted from the left and right sides, can not lie down to move the box.

### 1. Structure

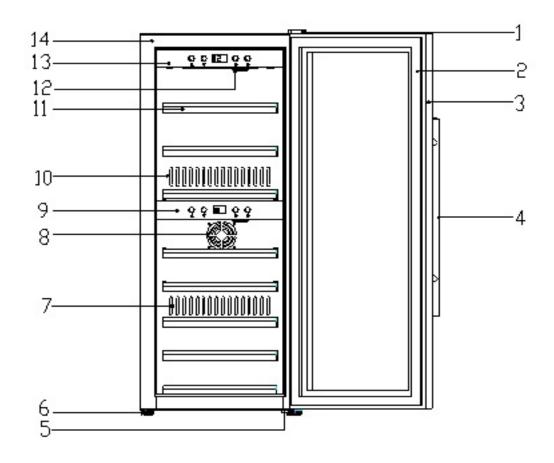

- (1) Up Hinge Cover
- (3) Door Frame
- (5) Down Hinge
- (7) Hot Air Outlet
- (9) Control Panel (Down)
- (11) Rack
- (13) Control Panel (Up)

- (2) Door Sealing
- (4) Door Handle
- (6) Foot
- (8) Air inlet
- (10) Cold Air Outlet
- (12) Sensor Cap
- (14) Casing

## 2. Important Safety Instructions

Basic precautions when using,

- (1) Only use your wine cabinet for intended purposes, as described in this guide.
- (2) Never unplug the wine cabinet by pulling out the power cord, grip the plug firmly and pull straight out to remove from wall socket.
- (3) Immediately repair or replace any worn or damaged cord, never use a cord that is split or which shows signs of wear along its length or on its ends.
- (4) This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- (5) Children should be supervised to ensure that they do not play with the appliance, Do not allow children to climb on, sit on or stand on the wine cabinet, nor hang from its shelves. They could damage the cabinet.
- (6) Do not use an extension cord, Do not operate this device if its power cable or plug is damaged, if it does not work properly or if it is damaged or has work properly or if it is damaged or has been dropped. If the power cable is damaged. If the power cable is damaged, it will need to be replaced by the manufacturer or his service agency or a similar qualified person, to avoid any dangers.
- (7) Do not place other appliance inside the cabinet.


#### 3. Wine cabinet Installation:

(1) When you receive the cabinet, make sure when you unpack it there is no flaws in its external appearance (from shocks, deformation, etc.)

- (2) Open the door and check all interior fittings and supplied items if are all complete (shelves, instruction, control panel, etc.) Please install it according to the following points if the shelves or shelf brackets fall off during transit.
- (3) After checking, if no problem, then, pls carry to the final place, which should be care as follows:
  - A. Leaving space of minimum 5cm between your wine cabinet and left & right wall; at least 8cm between back of cabinet and the wall.
  - B. Position the wine cabinet on a flat level surface, if not, adjust the feet of wine cabinet to keep level.
- (4) Away from sources of heat and high humidity areas (laundry room and bathroom, etc).
- (5) Do not tilt it at an angle of more than 45° when move the cabinet. Allow a minimum 10-minute interval between transit and re-starting.
- (6) Make sure the ventilation is free if you wish to install your cabinet into a worktable, otherwise, it will reduce the effect of usage.
- (7) Pls check the plug and cable before you connect the power, then, make sure correct voltage of 220V-240V/50Hz.

## 4. Temperature Setting

4.1The temperature setting of dual temperature wine cabinet

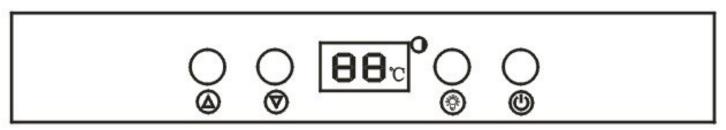

- 4.1.1 The item will be used under the room temperature ranging from 10 to 38 °C (50°F-101°F)
- 4.1.2 Temperature setting range of cabinet is 5°C~20°C (41°F~68°F) (Regarding the single zone, subject to ambient temperature, NO heating element). Customers can reset the temperature according to their actual demands.

Both the wine cabinet and the indicator will turn on until the desired temperature is achieved. Single Temp. zone is the same operation. 4.2.3 Pushing the temperature key up and down for 5 seconds, then, temperature display mode will be exchange between °C and °F.

- 4.2.4 The temp. of the top compartment must be set lower than the bottom compartment, or at the same temp. as the bottom compartment, but it should not set at temp. higher than the bottom compartment.
- 4.2.5 control panel for single zone
  - (1)

ON/OFF of the whole system.

(1)

ON/OFF of Inside Cabinet LED light

Temperature Up setting

**®** 

Temperature Down Setting

4.2.6 Control Panel for dual zone

**Upper** Control Panel

(1)

ON/OFF of the whole system.

(3)

ON/OFF of Inside Cabinet LED light

(4)

Temperature Up setting

(1)

Temperature Down Setting

**Down** Control Panel

(1)

ON/OFF of the down zone system

- ON/OFF of inside Cabinet LED light
- Temperature Up setting
- Temperature Down Setting

## 5. Loading and Storage of Wine Bottle:

#### 5.1 Bottle Loading Method:





- Wooden shelf capacity: 5, 9 or 11 bottles / shelf
- Bottom shelf capacity: 8 or 12 bottles / shelf
- Maintain a minimum 20mm between bottle and back plate
- Ensure storage Bottle bottom Dia.78mm & Height 300mm,otherwise, less Bottle loading


#### 5.2 Ensure bottle and shelf safety, check the following tips:

- A Spread your bottles out as evenly as possible over the shelves, so weight is not concentrated in one point; and make sure your bottles will not touch the back of the cabinet
- B Make sure bottles are not all grouped together at the top or bottom of the cabinet.
- C Following loading instructions provided in section 6.1, according to the type of storage fixtures with which your cabinet is equipped, and never stack bottles on a sliding shelf.
- D Due to Humidity will be fluctuated based on Room Humidity and Temp. pls make special film to pack before storage inside cabinet, which will ensure the lable of bottle could not be damaged

#### 5.3 Humidity percentage inside cabinet: 50%-80%

## 6. Installing Your Handle


Install the handle according to the following four steps:

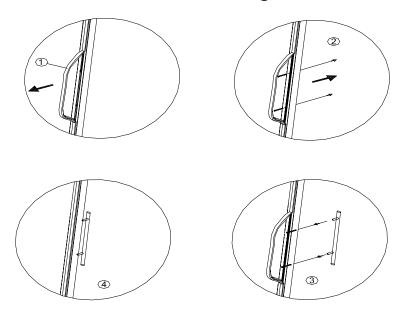


- 1. Move door seal out in the place of installing the handle
- 2. Take screws from Manual Bag & Put it in the appointed place
- 3. Fasten door handle by screwdriver
- 4. Refit the door seal to the relevant position

## 7. Wood shelf changing

Once Wood shelf need to change, pls check which kind of slider, which used, two slider as follow firstly:

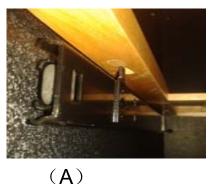

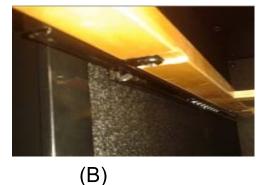

If slider is (A), then, only take out shelf and change another new shelf, it will be ok. But pls make sure the wood hole need to match the slider hook.

If slider is (B), then, you need operate normal as below step:

- 1. Unscrew the wood shelf from slider
- 2. Take out the old wood shelf and change new one
- 3. Screw the wood shelf again from shelf bottom as previous, then, it is Ok.

#### 8. Maintenance

In order to ensure best performance & long-last reliable working item, pls follow the simple maintenance and cleaning operations as below:

- Make sure the power cord is unplugged before cleaning the back of your cabinet, or before moving it.
- Clean the inside of your cabinet thoroughly once a year, after unplugging and unloading it (uses water and a mild cleaning item, then rinse carefully).
- To assure that your wine cabinet provides long-lasting reliable performance, you should check it regularly and inform your dealer if anything unusual is found.

## 9. Trouble Shooting

Problem	Solution
	Plug or not
no working	Fuse break
	No power
	Heat source near the item
	Ventilation not well
	Door close not well or door open too long
Cooling problem	Door sealing problem or deformation
	Bottles loading too much in same shelf
	Air inlet or outlet block
	Control Setting problem
	Ventilation space in the right & left casing not enough
	Wine cabinet placed not flat
Noisy	Item touch the wall
	Some parts loose or taken off

If still have problem after checking above, please try to contact service center or dealer.

#### Note: normal operation for following phenominent:

#### A) Compressor no start:

Compressor will not start if room temperature is lower than desired temperature, but item is still working with heater inside till desired temperature achieved.

#### **B) Compressor re-start**

Compressor will stop working when cooling system in the cabinet reaches presetting temperature, and re-start working until the desired temperature is

achieved. Allow a minimum 5 minute interval before re-starting.

#### C) Dew on the surface of cabinet:

The surface of wine cabinet especially the glass door appears some frost if item in a damp room. This is due to the moisture in the air coming into contact with the cabinet. Please wipe it away with dry cloth.

#### D) Normal Operating Sounds You May Hear

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- Popping or crackling noises due to the auto defrost cycle melting frost build-up.
- Liquid Sound:
  - (1) The sound of compressor when starts or stops working
  - (2) The flowing sound of refrigerant in the refrigeration system
  - (3) The evaporating sound of refrigerant in the evaporator

#### E) Condensation formed inside the cabinet

Under the environment with high level of humidity or the door of wine cabinet has been left open for a long period or opened frequently, there are much condensation, and pls wipe off the water from the door and walls and leave the door closed as long as possible.

#### F) Heat function on bottom zone:

Heat function on bottom zone will automatically be on as below reason.

- a> When Setting temp. is upper than Room Temp.
- b> When inside bottom Temperature is lower than setting Temp.

#### G) Indicator light:

When temperature inside cabinet is out of range of setting temperature, both up and down indicator light will be on. Once temperature reaches setting temperature, then, this light will be off automatically.